

TIMELESS

WOOD FLOORS

MAINTENANCE & CARE GUIDE

These engineered hardwood floors are very easily maintained. Use a quality wood floor cleaner such as those manufactured by Bona and a specialty cloth flooring mop available from flooring retailers.

NOTE: If your floor has an oil finish, check with your dealer or installer for appropriate maintenance products and procedures.

STEP ONE: Vacuum or sweep your floor to remove any particles that could scratch your floor.

Warning: Vacuums with a beater bar or power rotary brush head can damage a wood floor and never should be used.

Failure to vacuum or sweep your floor before using the dampened cloth to clean can result in “creating mud” on your floor which then can get trapped in the texture of your floor.

STEP TWO: Apply the cleaner directly to the cloth flooring mop. Do not spray the cleaner directly on the floor to avoid the wood absorbing the moisture.

Spraying cleaner directly on the floor can also result in the cleaner drying on the floor and leaving a “milky haze” due to dried cleaner solids on top of the finish.

If a haze appears on your floor after a while due to dried solids on the finish you should clean your floor with reverse-osmosis or distilled water instead of a wood floor cleaner for your regular cleaning until the haze is gone.

Reverse osmosis and distilled water have no dissolved solids (like calcium) that tap water can contain. These types of water should re-dissolve the solids dried on the floor, so the cloth can pick them up.

Some approved cleaners (like Bona) have mops that spray a fine mist of cleaner on the floor. These are fine as long as you do not apply too much liquid to the floor and the floor appears dry once done cleaning an area.

STEP THREE: Use a back-and-forth motion with the mop. When the cloth cover becomes soiled, simply replace it with a clean one. Cleaning the floor with a soiled cover could cause streaking. The covers are re-usable so simply throw the cover in the wash and dry it as you would any towel. Avoid using fabric softener as the absorbency will be reduced.

COMMON CLEANING MISTAKES THAT CAN VOID YOUR WARRANTY AND DAMAGE YOUR FLOOR

Never wet your floor directly with cleaner or with water.

Some cleaners have directions to “wet mop” the floor or apply cleaner liberally to the floor. This is not correct and these cleaners or cleaning methods should not be used.

The exception to this is if the cleaner is approved (like Bona) **and is applied in small amounts via a fine mist** like the Bona Spray Mop.

Once your floor has been dust mopped or vacuumed you only need to spot clean the areas that require it.

If you are cleaning the whole floor always spray the mop head with cleaner.

Wetting down your floor with cleaner can damage the floor if the wood absorbs excess moisture and it will cause the haze on your floor that was previously discussed.

The flooring should not look “wet” when you are done cleaning an area. If it looks wet you used too much liquid and did not pick up all the moisture with the back-and-forth motion. Your flooring should look dry when done cleaning an area.

If your floor looks wet after you have cleaned it you have left moisture on the floor. The wood will absorb this moisture and expand. The wood expansion will stretch the urethane finish. When the wood loses this moisture it contracts, but the urethane finish cannot contract. This will weaken the bond between the urethane finish and the wood.

Over time this repeated expansion and contraction due to excessive moisture during cleaning will break the bond between the wood and finish resulting in the finish peeling. This damage is not warrantable as it was caused by excessive moisture.

STEAM MOP WARNING: Although promoted by Steam Mop manufacturers as being safe for use on wood floors this is NOT THE CASE.

Use of a steam mop can introduce excess moisture and heat into your wood floor. This can cause permanent damage. **USE OF A STEAM MOP WILL VOID YOUR WARRANTY.**

CLEANERS WITH OILS WARNING: Some cleaners that describe themselves as hardwood floor cleaners contain oils (natural or otherwise). These oils can trap dirt in the texture of wire brushed floors and then harden as it dries. This trapped dirt can be very tough to remove. Do not use cleaners with oils on textured hardwood and its best to avoid them on smooth hardwood.

HUMIDITY

To prevent excessive expansion, shrinkage, crackling or buckling of your hardwood floor it is important to maintain humidity level for your area between **25% and 60% RH** (non-radiant heated sub-floors)

NOTE: If your flooring has a **4mm lamella** (top layer) and a plywood core, the minimum humidity levels is **30%-65% RH (non-radiant heated sub-floors)**. See your dealer to help determine your lamella thickness.

Use appropriate relative humidity control devices and monitor your relative humidity (RH) with a stand-alone hygrometer that has a humidity range of least 10%-80% RH and is accurate to +/- 3% below 30% RH.

The ThermoPro TP50 model hydrometer is an affordable hygrometer that is accurate in these ranges.

Many hygrometers available at retail stores are not accurate below 30% and can give you a false sense of security. Make sure to check the technical specifications of the hygrometer before making your purchase.

RADIANT HEAT SUB-FLOOR MONITORING & HUMIDITY

If you have a radiant heated sub-floor you must maintain your humidity levels between 30%-60% RH as direct heat tends to drive some moisture out of wood.

NOTE: If your flooring has a **4mm lamella** (top layer) and a plywood core, the minimum humidity levels for a radiant heated sub-floor application is **35%-65% RH**. See your dealer to help determine your lamella thickness.

The installer, home builder and homeowner should all have infrared thermometers to measure the surface temperature of the flooring to make sure it does not exceed 80F (27C) at any time.

The thermostats in the house do not measure the flooring temperature so do not rely on them to tell you how hot your floor surface is, use an infrared thermometer.

Infrared thermometers are relatively inexpensive and are available at most home improvement centers.

PROTECTION

Water, dust, sand and salt are the worst enemies of wood. The combined effect of water and sand, salt or dust is devastating to flooring, so it is important to place floor mats at entrances.

Install felt pads to the legs of furniture and chairs to avoid scratching flooring when objects are moved.

If using mats on your wood floor do not use rubber-backed mats as it will trap moisture and damage your floor. Use a breathable mat and honeycomb type of non-slip mat underneath so air can circulate through the mat to the floor.

SUNLIGHT

Normal exposure to sunlight will cause colour changes in any hardwood floor. Area rugs, which block out light, should therefore be shifted regularly. The use of window coverings to shade the floor will minimize changes due to sunlight.

CARE PRODUCTS

For best results, we recommend the use of specially formulated wood flooring cleaners and maintenance products such as Bona products.

Note: Never use wax or household detergents on any engineered hardwood floor.

Do not use oil-based soap on a urethane finished floor.

These products may damage the finish and leave a greasy film, making the floor slippery and difficult to maintain afterwards.